


A strip of silicone (also known as a welt) is sewn to all edges of the fabric. This welt is then inserted into a channel in the aluminum frame. The fabric is held taut and smooth and the stitching is hidden in the channel.

The framing system consists of:

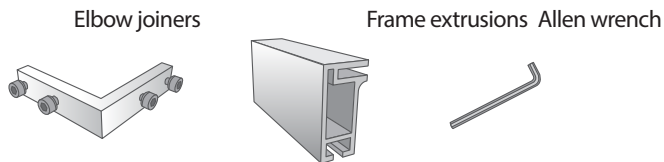

1. Insert the joiners into the channel on the frame.

2. Finger tighten the allen bolts on the joiners until each corner is even and square. Then use the allen wrench to securely tighten all the bolts.

3. Insert the fabric into the frame channel starting with the corners. Ensure the welt is turned in and completely concealed.

4. Push the welt as far in the channel as possible.

5. Once the corners are in place, continue insertion at the middle of each frame section.

6. Continue until the welt is completely inserted.